

PRODUCT

ESD Heel Strap with Clip



FEATURES

- Clip type with snap release - easy to wear and take off
- Double layered conductive cup (3.5mm x 230mm)
- Each heel grounder incorporates a 1 Meg Ohm safety resistor
- All heel grounders are designed for use in conjunction with ESD flooring
- Recommended to be worn on both feet
- Reusable and can be washed by hand in mild detergents
- Conforms to the requirements of ANSI/ESD S-20.20, EIA 625
- Hard wearing heel grounders designed for long term use

NOTES

The heel grounder must be tested from time to time using the footwear test station.

PRODUCT CODE	DESCRIPTION	SIZE	QUANTITY
068-0005	Heel Grounder with Clip	One Size	Each
068-0005F	Heel Grounder with Clip	One Size	Pair

To request a quotation or for more information, please call **+44 (0)1473 836200**
email info@antistat.co.uk or visit www.antistat.co.uk

DETAILS	TYPICAL VALUE
Outer Conductive Surface (Black)	$10^3 - 10^5$ Ohms
Inner Anti-Static Surface (Grey)	$10^7 - 10^8$ Ohms
Conductive Tab (Blue)	$10^3 - 10^4$ Ohms
Overall Resistivity	10^6 Ohms
Resistance	1Meg Resistor built in



1 Remove Heel Grounder from its packaging and place the Black Conductive Rubber Strip on the heel grip of the shoe.



2 Place the Black Elastic Strip at the back of the shoe.



3 Push the Clip Fastener together to lock in place and pull the tail of the Black Elastic Strap to tighten.



4 Feed the Grey Conductive Ribbon into the sock or shoe to complete the grounding path.




5 Inspect the Heel grounder for a secure and comfortable fit by gently tugging on the straps.



6 The footwear is now ready to be tested before entering a static sensitive area. Repeat with other shoe.

To request a quotation or for more information, please call **+44 (0)1473 836200**

email info@antistat.co.uk or visit www.antistat.co.uk

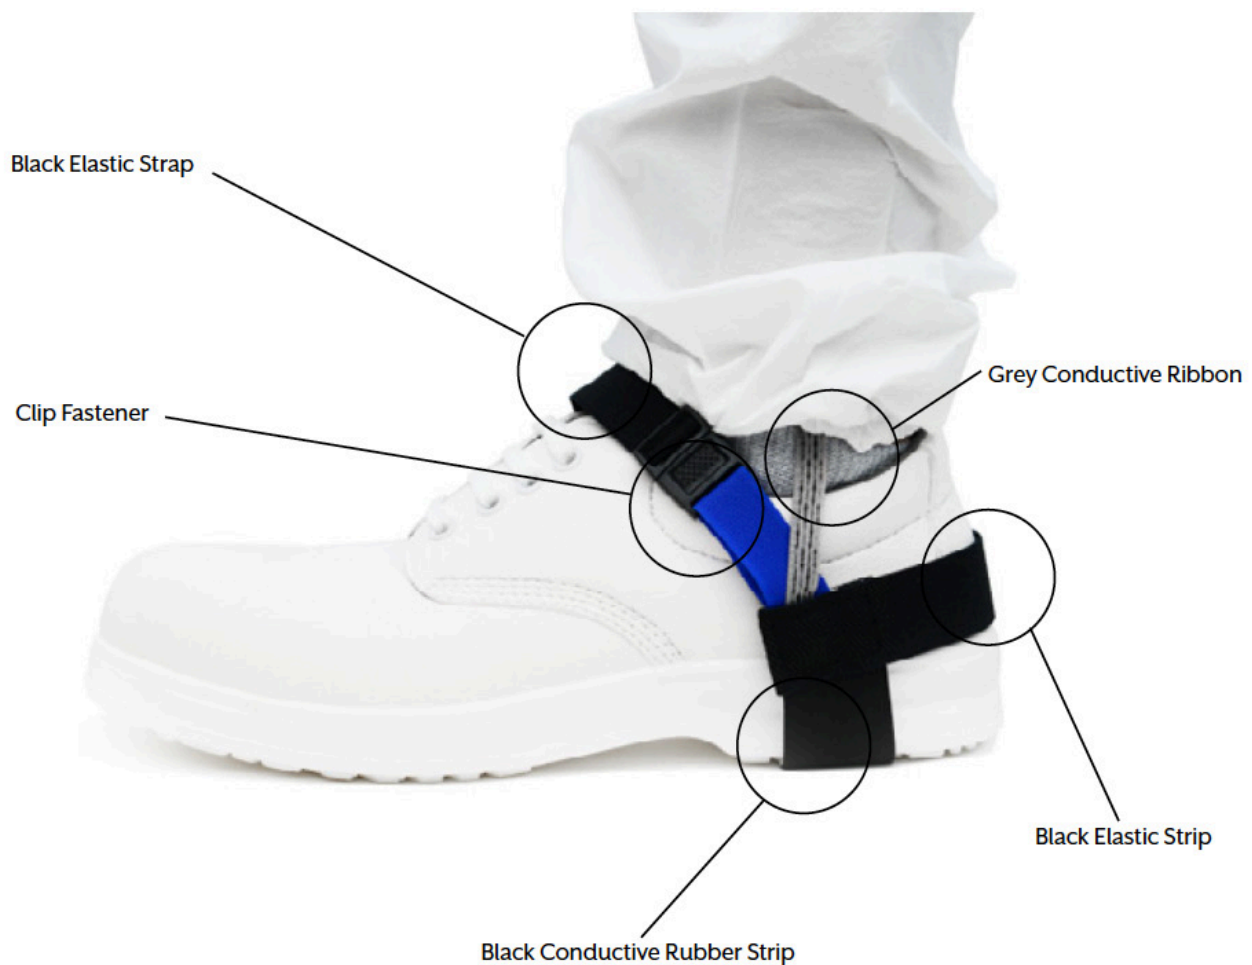

To request a quotation or for more information, please call **+44 (0)1473 836200**
email info@antistat.co.uk or visit www.antistat.co.uk